

# User Manual

## CS-D808 & CS-D1008

### Closed-loop Stepper Drive



Revision 3.1

©2018 Leadshine Technology Co., Ltd.

**UK Official Distributor Address:**

Motion Control Products Ltd, 11-15 Francis Avenue, Bournemouth, Dorset, BH11 8NX, United Kingdom

Tel: +44(0)1202 599922

Fax: +44 (0)1202 599955

Web: <https://www.motioncontrolproducts.com/>

Sales: [enquiries@motioncontrolproducts.com](mailto:enquiries@motioncontrolproducts.com)



## Notice

Read this manual carefully before any assembling and using. Incorrect handling of products in this manual can result in injury and damage to persons and machinery. Strictly adhere to the technical information regarding installation requirements.

This manual is not for use or disclosure outside of Leadshine except under permission. All rights are reserved. No part of this manual shall be reproduced, stored in retrieval form, or transmitted by any means, electronic, mechanical, photocopying, recording, or otherwise without approval from Leadshine. While every precaution has been taken in the preparation of the book, Leadshine assumes no responsibility for errors or omissions. Neither is any liability assumed for damages resulting from the use of the information contained herein.

This document is proprietary information of Leadshine that is furnished for customer use ONLY. Information in this document is subject to change without notice and does not represent a commitment on the part of Leadshine. Therefore, information contained in this manual may be updated from time-to-time due to product improvements, etc., and may not conform in every respect to former issues.

Motion Control Products Limited is the official UK distributor of China Leadshine Technology Co. Ltd.

## Record of Revisions

<b>Revision</b>	<b>Date</b>	<b>Description of Release</b>
<i>1.0</i>	<i>September, 2017</i>	<i>Initial Release</i>
<i>3.1</i>	<i>October, 2018</i>	<i>Firmware and PC software update to version 3.1</i>

## Table of Contents

1. Introduction.....	3
2. Specifications.....	3
2.1 Electrical Specifications .....	3
2.2 Environment .....	4
2.3 Mechanical Specifications .....	4
3. Connections and LED Indication.....	4
3.1 Connector P1 & P2– Control Input and Output Connections .....	5
3.1.1 Pin Assignments of P1 & P2.....	5
3.1.2 Typical Control and Fault Output Connections .....	6
3.2 Connector P3 - Encoder Connection .....	7
4. Motor Selection.....	8
5. Power Supply Selection .....	8
6. DIP Switch Configurations .....	9
7. Typical Connection .....	10
8. Sequence Chart of Control Signals .....	10
9. Protection Functions .....	11
10. Software Configuration .....	11
11. Accessories .....	11
12. Troubleshooting .....	11
13. Warranty.....	12
TWELVE MONTH LIMITED WARRANTY .....	12
EXCLUSIONS.....	12
SHIPPING FAILED PRODUCT & OBTAINING WARRANTY SERVICE .....	12
WARRANTY LIMITATIONS.....	12
Appendix A.    Leadshine CS-D808 / CS-D1008 Compatible Stepper Motors .....	13
Appendix B.    Powering a Third-Party Motor with CS-D808 / CS-D1008.....	14

## 1. Introduction

Our new CS-D808 / CS-D1008 is a closed-loop stepper drive designed to solve the loss of step problem in open loop stepper control systems, thus increase system reliability at minimal cost increase. It implements advanced control algorithm of Leadshine technology based on its tens of years' experience in stepper and servo controls. The CS-D808 / CS-D1008 is highly reliable and affordable and performs excellent in many industrial applications such as CNC, medical, electronics, packaging...

The CS-D808 / CS-D1008 can power 2-phase NEMA 34 stepper motors with incremental encoders. Compared with traditional open loop stepper systems, a CS-D808 / CS-D1008 adopted closed-loop step system can eliminate potential loss of step, make real-time position error correction, and do not need torque reservation (100% torque implementation). Also it can power the driven stepper motor with reduced heating, lower noise, low vibration...

### 1.1 Features

- No loss of step
- No torque reservation
- No hunting or overshooting
- No tuning for easy setup
- A configurable digital output for the option of In Position, or Brake Control
- Low noise and vibration, smooth motion
- Enhance performance at low speed application ( <60RPM)
- CS-D808: 30-80VDC & CS-D1008: 30-100VDC supply voltage, max 8A output current
- Max 200 KHz input frequency
- 15 micro step settings of 800-51,200 via DIP switches, or 200-51,200 via software (increase by 200)
- Protections for over voltage, over current and position following error

### 1.2 Applications

When a CS-D808 / CS-D1008 closed-loop stepper drive is implemented with a compatible stepper motor with encoder, the closed stepper system can be adopted in many small to median speed applications such as CNC routers, CNC mills, CNC laser cutters, CNC plasma, lab automation instruments, plotters, medical equipment, electronic equipment, small packaging machines, etc.

## 2. Specifications

### 2.1 Electrical Specifications

Parameters		Min	Typical	Max	Unit
Output Current		0.5	-	8.0 (peak))	A
Supply Voltage	CS-D808	30	48, 60	80	VDC
	CS-D1008	30	48, 60, 70	100	VDC
		20	-	80	VAC
Logic signal current		7	10	16	mA
Pulse input frequency		0	-	200	kHz
Minimal pulse width		2.5	-	-	μs
Minimal direction setup		5.0	-	-	μs
Isolation resistance		500	-	-	MΩ

## 2.2 Environment

Cooling	Natural Cooling or Forced cooling	
Operating Environment	Environment	Avoid dust, oil fog and corrosive gases
	Ambient Temperature	0 — 65°C (32 - 149°F)
	Humidity	40%RH — 90%RH
	Operating Temperature	0°C — 50°C (32 - 122°F)
	Vibration	10-50Hz / 0.15mm
Storage Temperature	-20°C — 65°C (-4°F - 149°F)	
Weight	Approx. 570g (20.2 oz)	

## 2.3 Mechanical Specifications

(unit: mm [1inch=25.4mm])

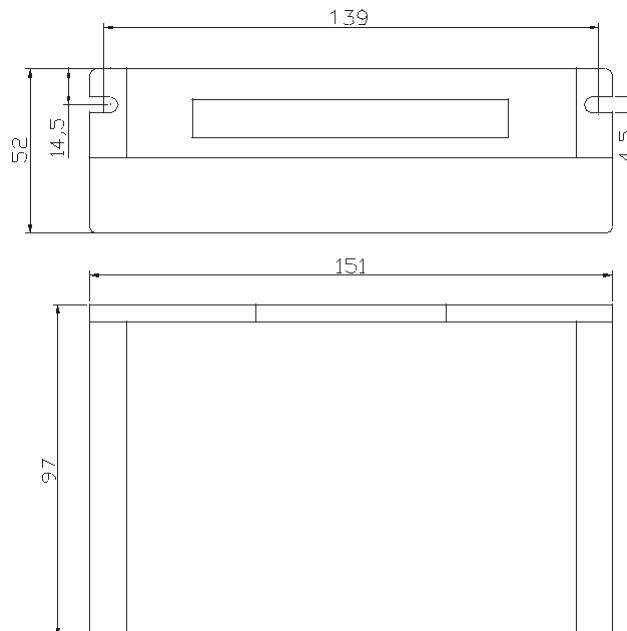


Figure 1: Mechanical specifications

## 2.4 Heat Dissipation

- CS-D808 / CS-D1008 reliable working temperature should be no more than 60°C (140°F)
- It is recommended to mount the drive vertically to maximize heat dissipation. Mount a cooling fan nearby if necessary.
- If multiple CS-D808 / CS-D1008 drives are installed, it is suggested to keep a minimal 30mm (1.2 inches) between two of them.

## 3. Connections and LED Indication

CS-D808 / CS-D1008 closed-loop stepper drive has 5 connection blocks from P1 to P5 (see figure 2).



Figure 2: CS-D808 / CS-D1008 connectors

### 3.1 Connector P1 & P2– Control Input and Output Connections

#### 3.1.1 Pin Assignments of P1 & P2

The P1 & P2 connector in Figure 2 contains connections for control signals and a configurable digital output.

##### a) Pinout Definitions

There are 3 control signals for pulse, direction, and enable. See the following table for details.

Pin Name	I/O	Details
PUL+	I	<u>Pulse signal:</u> <b>(1)</b> . In single pulse (pulse & direction) control mode, this input represents pulse signal. A pulse signal is active at the rising or falling voltage edge (set by PC software). <b>(2)</b> . In double-pulse (CW/CCW) control mode (set by PC software), this signal input represents clockwise (CW) pulse, and is active at both high voltage level and low voltage level. <b>(3)</b> . 4.5-24V for voltage HIGH, 0-0.5V for voltage LOW (same for DIR and ENA signals). <b>(4)</b> . Pulse width should be set to 2.5µs or longer.
PUL-	I	
DIR+	I	<u>Direction signal:</u> <b>(1)</b> . In single pulse (step & direction) control mode, this signal's low and high voltage levels represent the two directions of motor rotation (e.g. clockwise and counterclockwise). <b>(2)</b> . In double-pulse (CW & CCW) control mode, this signal represents counterclockwise (CCW) rotation. It is active at both voltage high level and low level. <b>(3)</b> . Minimal DIR signal setup time should be at least 5µs. <b>(4)</b> . Rotation direction is related to your motor/drive wiring. You can reverse the default rotation direction by toggling the SW5 DIP switch.
DIR-	I	
ENA+	I	<u>Enable signal:</u> This signal is used for enabling/disabling the drive. High voltage level of 4.5-24VDC (NPN control signal) for enabling the drive and low voltage level of 0-0.5VDC for disabling the drive. PNP and Differential control signals are on the contrary, namely Low level for enabling. By default, this signal is left <b>UNCONNECTED &amp; ENABLED</b> .
ENA-	I	
Pend+	O	<u>Configurable Digital Output Signal:</u> A configurable OC output signal. It takes a sinking or sourcing 20mA current at 5-24V. It can be configured as one of the 2 types, IN POSITION (default), or BRAKE CONTROL through Leadshine ProTuner CS-D software.
Pend-	O	

<b>ALM+</b>	<b>O</b>	Fault Signal: An OC output signal which is active when one of the following error protections is activated: over-voltage, over-current, and position following error. This port can sink or source 20mA current at 5-24V. The resistance between ALM+ and ALM- is low impedance in normal operation and will change to high when the drive goes into error protection. The voltage active level of this <b>fault output</b> signal can be configured by configuration software.
<b>ALM -</b>	<b>O</b>	

**Notes:** (1) Shielding control signal wires is suggested;  
 (2) to avoid/reduce interference, don't tie control signal cables and power wires together.

**b) In Position, or Brake control Output Configuration**

The digital output on the P2 connector, marked as Pend+ & Pend-, is software configurable (read Leadshine ProTuner CS-D software manual). It can be configured as one of the available 2 options - "In Position", and "Brake Control". Please refer to Leadshine ProTuner CS-D closed-loop software manual for how to configure this output.

- In Position

Use Leadshine ProTuner for CS-D software to configure this output as an IN POSITION output. In this case, an output signal can be sent out when the targeted position is in the "Target" range (see *parameter Distance to Send "In position" Output Signal* in software manual) to external devices such as relays, motion controllers, PLCs, IO boards, etc.

- Brake Control

Use Leadshine ProTuner for CS-D software to configure this output as a BRAKE CONTROL output. In this case, this signal can be used for automatic brake control while system power failure. It is recommended to connect a fly-wheel diode in parallel to a 24VDC relay and brake coil connection. Refer to the following figure for brake connection

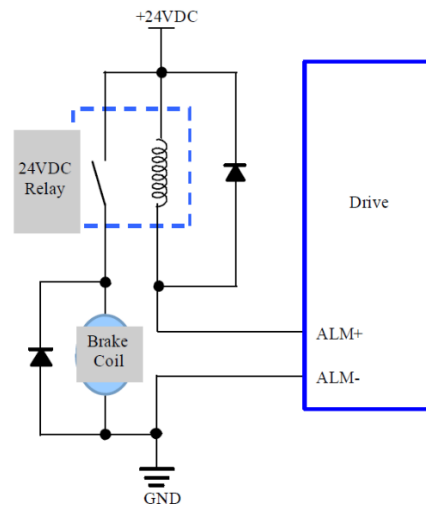


Figure 3: Brake Output Connection

3.1.2 Typical Control and Fault Output Connections

The CS-D808 / CS-D1008 can accept differential and single-ended control signal inputs (open-collector and PNP output). A CS-D808 / CS-D1008 has 3 optically isolated control inputs, PUL, DIR, and ENA. Refer to the following two figures for connections of open-collector and PNP signals.

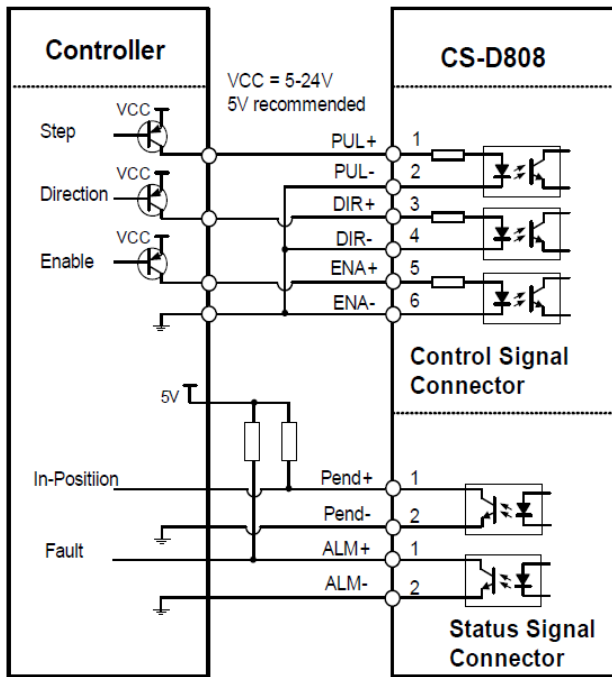


Figure 4: Connections to PNP signal  
(Common-cathode)

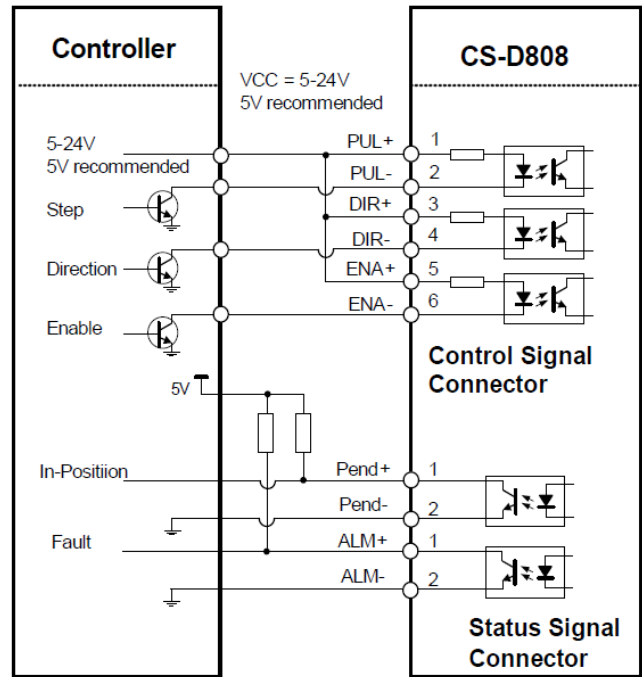


Figure 5: Connections to open-collector signal  
(Common-anode)

### 3.2 Connector P3 - Encoder Connection

The P3 connector in Figure 2 is for encoder signal connection. Refer to the following table for details.

Drive Pin Name	Description
EB+	Encoder B+ input connection
EB-	Encoder B- input connection
EA+	Encoder A+ input connection
EA-	Encoder A- input connection
VCC	Encoder +5V voltage output connection
EGND	Power ground connection

### 3.3 Connector P4 - Motor and Power Supply Connection

The P4 connector in Figure 2 is for motor connection. Refer to the following table for details.

**Notes:** see Appendix B for compatible Leadshine power supplies


### 3.4 Connector P5 – RS232 Connection

The P5 connector in Figure 2 is a RS232 communication port for PC connection. Refer to the following pin definitions.



### RS232 Communication Port – RJ11

Pin	Name	I/O	Description
1	NC	-	Not connected.
2	+5V	O	+5V power output.
3	TxD	O	RS232 transmit.
4	GND	GND	Ground.
5	RxD	I	RS232 receive.
6	NC	-	Not connected.

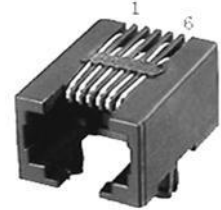

**Notes:** RS232 connection of CS-D808 / CS-D1008 is for tuning purpose only, not for RS232 command controls.

### 3.5 LED Light Indication

There are two LED lights for CS-D808 / CS-D1008, one red and one green. The GREEN one is the power indicator which will be always on generally. The RED one is a protection indicator. It is off always when a CS-D808 / CS-D1008 operates normally, but will flash 1, 2 or 7 times in a 5-second period when error protection is enabled. Different number of flashes indicates different protection type (read Section 9).

## 4. Motor Selection

The CS-D808 / CS-D1008 is designed to power 2-phase (or 4-phase 0.9 degree) NEMA 34 stepper motors under 10000-line incremental encoders (recommend 1000-line). Leadshine offers many high performance stepper motors compatible with the CS-D808 / CS-D1008 which you can find in the Appendix A of this document. The CS-D808 / CS-D1008 can also power similar stepper motors with incremental encoders from third-party suppliers.

## 5. Power Supply Selection

The CS-D808 /CS-D1008 can power medium size closed-loop stepper motors (frame size NEMA 34) from Leadshine (see Appendix A) or other motor manufacturers. To get good system performance, it is important to select proper supply voltage and output current. Generally speaking, supply voltage determines the high speed performance of the motor, while output current determines the output torque of the driven motor (particularly at lower speed). Higher supply voltage will allow higher motor speed to be achieved, at the price of more noise and heating. If the motion speed requirement is low, it's better to use lower supply voltage to decrease noise, heating and improve reliability.

**Notes:** See Appendix B at the end of this document for Leadshine CS-D808 / CS-D1008 compatible switching power supplies specially designed for stepper & servo controls.

### 5.1 Regulated or Unregulated Power Supply

Both regulated and unregulated power supplies can be used to supply the drive. However, unregulated power supplies are preferred due to their ability to withstand current surge and fast response for current change. If you prefer to a regulated power supply, it is suggested to choose such a power supply specially designed for stepper/servo controls. Or, in the case when only normal switching power supplies are available, it is important to

use “OVERSIZE” high current output rating power supplies (for example, using a 4A power supply for 3A stepper motor) to avoid problems such as current clamp. On the other hand, if unregulated supply is used, one may use a power supply of lower current rating than that of motor (typically 50%-70% of motor current). The reason is that the drive draws current from the power supply capacitor of the unregulated supply only during the ON duration of the PWM cycle, but not during the OFF duration. Therefore, the average current withdrawn from power supply is considerably less than motor current. For example, two 3A motors can be well supplied by one power supply of 4A rating.

## 5.2 Power Supply Sharing

Multiple CS-D808 / CS-D1008 drives can share one power supply to save space and reduce cost, if that power supply has enough power capacity. To avoid cross interference, connect each stepper drive directly to the shared power supply separately. To avoid cross interference, DO NOT daisy-chain connect the power supply input pins of the Drivers. Instead connect them to power supply separately.

## 5.3 Selecting Supply Voltage

The CS-D808 is designed to operate within 30-80VDC voltage input. When selecting a power supply, besides voltage from the power supply power line voltage fluctuation and back EMF voltage generated during motor deceleration needs also to be taken into account. Ideally it is suggested to use a power supply with the output of **30-72VDC**, leaving room for power line voltage fluctuation and back-EMF.

The CS-D1008 is designed to operate within 20-70VAC or 30-100VDC voltage input. Ideally it is suggested to use a power supply with the output of **20-70VAC or 48-100VDC**.

Higher supply voltage can increase motor torque at higher speeds, thus helpful for avoiding losing steps. However, higher voltage may cause bigger motor vibration at lower speed, and it may also cause over-voltage protection or even drive damage. Therefore, it is suggested to choose only sufficiently high supply voltage for intended applications.

## 6. DIP Switch Configurations

The CS-D808 / CS-D1008 has a built-in 8-bit DIP switch to set microstep resolution, motor direction, auto tuning switch and so on.

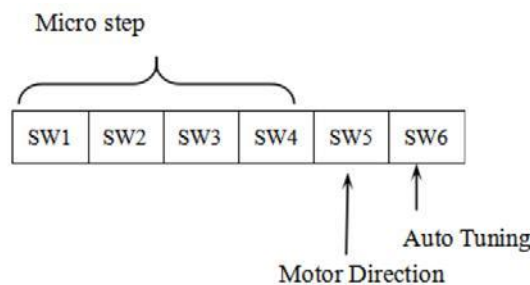


Figure 6: DIP switch Setting

### 6.1 Microstep Resolution (SW1-SW4)

Microstep resolution is set by SW1, 2, 3, 4 of the DIP switches as shown in the following table:

## 6.2 Other DIP Switch Settings (SW5-SW6)

	Function	On	Off
SW5	Default Direction	CW (clockwise)	CCW (counterclockwise)
SW6	Auto Tuning	No	Yes

## 7. Typical Connection

A complete closed-loop stepper system should include a stepper motor with encoder, CS-D808 /CS-D1008 drive, power supply and controller (pulse generator). A typical connection is illustrated in figure 6.

## 8. Sequence Chart of Control Signals

In order to avoid some fault operations and deviations, PUL, DIR and ENA should abide by some rules, shown as following diagram:

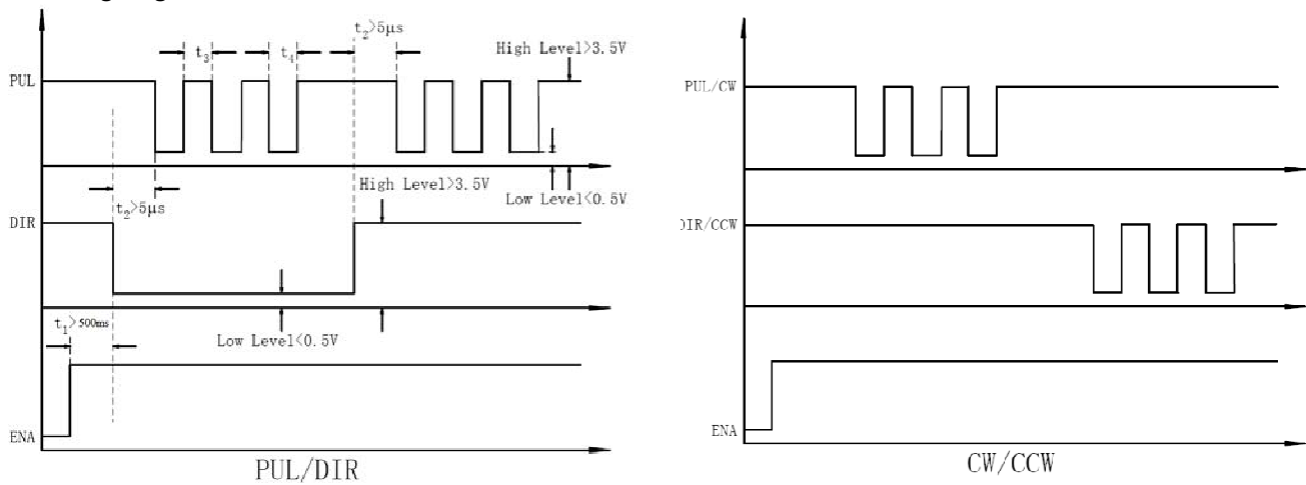


Figure 8: Sequence chart of control signals

### Remark:

- $t_1$ : ENA must be ahead of DIR by at least 500ms. Usually, ENA+ and ENA- are NC (not connected). See "Connector P1 Configurations" for more information.
- $t_2$ : DIR must be ahead of PUL effective edge by 5us to ensure correct direction;
- $t_3$ : Pulse width not less than 2.5 us;
- $t_4$ : Low level width not less than 2.5us.

## 9. Protection Functions

To improve reliability, the drive incorporates some built-in protection features.

When above protections are active, the motor shaft will be free or the red LED blinks. Reset the drive by repowering it to make it function properly after removing above problems.

## 10. Software Configuration

The CS-D808 / CS-D1008 is designed for simple setup and implementation. For most applications no software configuration or tuning is needed especially when driving Leadshine stepper motors with encoders (see Appendix A). If you want to do fine tuning or custom configurations such as micro-step, current percentage change..., you can use Leadshine's free ProTuner software to make the changes. Download ProTuner at

[http://www.leadshine.com/UploadFile/Down/ProTuner\\_CS\\_Ds.V1.0.zip](http://www.leadshine.com/UploadFile/Down/ProTuner_CS_Ds.V1.0.zip) or

[http://www.leadshineusa.com/UploadFile/Down/ProTuner\\_CS\\_Ds.V1.0.zip](http://www.leadshineusa.com/UploadFile/Down/ProTuner_CS_Ds.V1.0.zip).

Download the software manual at [http://www.leadshine.com/UploadFile/Down/CS-Dsm\\_V1.0.pdf](http://www.leadshine.com/UploadFile/Down/CS-Dsm_V1.0.pdf) or

[http://www.leadshineusa.com/UploadFile/Down/CS-Dsm\\_V1.0.pdf](http://www.leadshineusa.com/UploadFile/Down/CS-Dsm_V1.0.pdf).

## 11. Accessories

If you plan to use the ProTuner software, contact your supplier or Leadshine to purchase the RS232 cable with part number [CABLE-PC](#) for connecting the CS-D808 / CS-D1008 to a computer with Windows 7 /8 /10 installed. In the case of using USB to RS232 conversion, contact your supplier or Leadshine for such a cable with part number [USB2.0-232](#) which has been verified working fine.



[CABLE-PC](#)

(RS232 tuning cable)



[USB2.0-232](#)

(USB to RS232 Conversion Cable)

## 12. Troubleshooting

In the event that your drive doesn't operate properly, the first step is to identify whether the problem is electrical or mechanical in nature. The next step is to isolate the system component that is causing the problem. As part of this process you may have to disconnect the individual components that make up your system and verify that they operate independently. It is important to document each step in the troubleshooting process. You may need this documentation to refer back to at a later date, and these details will greatly assist our Technical Support staff in determining the problem should you need assistance.

Many of the problems that affect motion control systems can be traced to electrical noise, controller software errors, or mistake in wiring.

## 13. Warranty

### TWELVE MONTH LIMITED WARRANTY

Motion Control Products Ltd warrants its products against defects in materials and workmanship for a period of 12 months from the shipping/purchasing date. During the warranty period Motion Control Products, at their discretion, will repair or replace products that are proved to be defective.

### EXCLUSIONS

The above warranty shall not apply to defects resulting from: improper or inadequate handling by the customer; improper or inadequate customer wiring; unauthorised modification or misuse; or operation beyond the electrical specifications of the product and/or operation beyond environmental specifications for the product.

### SHIPPING FAILED PRODUCT & OBTAINING WARRANTY SERVICE

If your product should fail during the warranty and you want to obtain warranty service, a RMA (returned material authorisation number) request form must be filled in on our website <https://www.motioncontrolproducts.co.uk/returns/> before returning the product for service. Please include a written description of the problem along with contact name and address. Customer shall prepay shipping charges returned to Motion Control Products for warranty service, and Motion Control Products shall pay for return of products to the customer, providing the fault is not customer caused. Send the failed product to your distributor for your area or to **Motion Control Products Limited**, 11-15 Francis Avenue, Bournemouth, Dorset BH11 8NX, UK. Also enclose information regarding the circumstances prior to the product failure. For full terms and conditions of Warranty and Returns Policy, please refer to our website <https://www.motioncontrolproducts.co.uk/returns/>

### WARRANTY LIMITATIONS

Motion Control Products makes no other warranty, either expressed or implied, with respect to the product. Motion Control Products specifically disclaims the implied warranties for a particular purpose. Some jurisdictions do not allow limitations on how long the implied warranty lasts, so the above limitation or exclusion may not apply to you. However, any implied warranty is limited to the 12-month duration of this written warranty.

## Appendix A. Leadshine CS-D808 / CS-D1008 Compatible Stepper Motors

The following Leadshine stepper motors with 1000-line encoders have been tested working with the CS-D808 / CS-D1008 closed-loop stepper drive.

Model	Frame Size	Torque	Length	Notes
	(NEMA)	(N.m / Oz-In)	(mm / inch)	
CS-M23435	NEMA34	3.5 / 495	95 / 2.20	-
CS-M23435-S		3.5 / 495	95 / 2.48	0.50-inch (12.7-mm) shaft
CS-M23445		4.5 / 637	109 / 2.76	
CS-M23445-S		4.5 / 637	109 / 3.27	0.50-inch (12.7-mm) shaft
CS-M23445B		4.5 / 637	135 / 2.44	24VDC brake integrated
CS-M23445WP		4.5 / 637	115 / 2.08	IP65 rated
CS-M23480		8.0 / 1132	127 / 3.03	
CS-M23480-S		8.0 / 1132	127 / 3.82	0.50-inch (12.7-mm) shaft
CS-M23480B		8.0 / 1132	173 / 3.82	24VDC brake integrated
CS-M23480WP		8.0 / 1132	133 / 2.94	IP65 rated
CS-M23485		8.5 / 1202	147 / 4.13	
CS-M23485-S		8.5 / 1202	147 / 4.13	0.50-inch (12.7-mm) shaft
CS-M23485B		8.5 / 1202	173 / 3.46	24VDC brake integrated
CS-M23485WP		8.5 / 1202	154 / 3.08	IP65 rated
CS-M234120		12 / 1698	158 / 4.29	-
CS-M234120B		12 / 1698	184 / 4.29	24VDC brake integrated
CS-M234120WP		12 / 1698	164 / 3.82	IP65 rated

Note: all above stepper motors are mounted with 1000-line incremental encoders

## Appendix B. Powering a Third-Party Motor with CS-D808 / CS-D1008

It is highly recommended to choose a Leadshine closed stepper motor along with the CS-D808 / CS-D1008 closed-loop stepper drive, for getting the best system performance and easy setup. See Appendix A for frequently purchased Leadshine closed-loop stepper motors.

For an OEM project if you cannot find one on Appendix A meeting your requirements there, please contact our sales team for further discussion at (+44) 01202 599922 or by email [enquiries@motioncontrolproducts.com](mailto:enquiries@motioncontrolproducts.com) Motion Control Products Ltd. also offer many other custom models which may satisfy your application needs.

In the case of powering a third party closed-loop stepper motor, pay special attention as described below.

- a) Your stepper motor must be a 2-phase stepper motor
- b) Your stepper motor must be mounted with a quadrature rotary encoder with the resolution of 500-5,000 line (2,000- 20,000 CPR).
- c) When the CS-D808 / CS-D1008 is first-time powered on after your stepper motor is connected, check the following possible causes if a position following error (see Section 9 above) happens.
  - Confirm both encoder and power cables are connected properly and tightly secured.
  - Power off the drive then swap the A+ and A- motor connections to the CS-D808 / CS-D1008 drive. The reason is the definitions of your Motor A+ and A- are different from those marked on CS-D808 / CS-D1008 motor connection pins (P4 of Figure 2).

If protection error is still seen after the above steps, contact your drive **supplier** or MCP technical support team.